

Model 28127 Series DECT6.0 Cordless Handset Speakerphone User's Guide



Your new GE telephone system is **EXPANDABLE** up to a total of 7 handsets (by purchase of optional Model 28107 handset with charge cradle)

Important Information

NOTICE: This product meets the applicable Industry Canada technical specifications.

Operation is subject to the following two conditions: (1) This device may not cause interference, and (2) This device must accept any interference, including interference that may cause undesired operation of the device.

The equipment must be installed using an acceptable method of connection. The customer should be aware that compliance with the above conditions may not prevent degradation of service in some situations.

Repairs to certified equipment should be made by an authorized Canadian maintenance facility designated by the supplier. Any repairs or alterations made by the user to this equipment, or equipment malfunctions, may give the telecommunications company cause to request the user to disconnect the equipment.

Users should ensure for their own protection that the electrical ground connections of the power utility, telephone lines and internal metallic water pipe systems, if present, are connected together. This precaution may be particularly important in rural areas.

CAUTION: Users should not attempt to make such connections themselves, but should contact the appropriate electric inspection authority, or electrician, as appropriate.

NOTES: This equipment may not be used on coin service provided by the telephone company.

Interference Information

This equipment generates and uses radio frequency energy which may interfere with residential radio and television reception if not properly installed and used in accordance with instructions contained in this manual. Reasonable protection against such interference is ensured, although there is no guarantee this will not occur in a given installation. If interference is suspected and verified by switching this equipment on and off, the user is encouraged to try to correct the interference by one or more of the following measures: Reorient the radio/television receiver's antenna, relocate the equipment with respect to the receiver, plug the equipment and receiver into separate circuit outlets. The user may also wish to consult a qualified radio/television technician for additional suggestions. This equipment has been fully tested and complies with all limits for Class B computing devices pursuant to part 15 FCC Rules and Regulations.

Telephone Network Information

Should your equipment cause trouble on your line which may harm the telephone network, the telephone company, where practicable, may notify you that temporary discontinuance of service may be required. Where prior notice is not practicable and the circumstances warrant such action, the telephone company may temporarily discontinue service immediately.

The telephone company may make changes in its communications facilities, equipment, operations or procedures where such action is required in the operation of its business. If these changes are expected to affect the use or performance of your telephone equipment, the telephone company will likely give you adequate notice to allow you to maintain uninterrupted service.

Notice must be given to the telephone company upon termination of your telephone from your line.

REN Number

On the bottom of this equipment is a label indicating, among other information, the Ringer Equivalence Number (REN) for the equipment.

The REN is useful in determining the number of devices you may connect to your telephone line and still have all of these devices ring when your telephone number is called. In most (but not all) areas, the sum of the RENs of all devices connected to one line should not exceed 5.

To be certain of the number of devices you may connect to your line as determined by the REN, you should contact your local telephone company.

REN Number is located on the cabinet bottom.

Hearing Aid Compatibility (HAC)

This telephone system meets FCC standards for Hearing Aid Compatibility.

Licensing

Licensed under US Patent 6,427,009.

FCC RF Radiation Exposure Statement

This equipment complies with FCC RF radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with a minimum distance of 20 centimeters between the radiator and your body. This transmitter must not be co-located or operated in conjunction with any other antenna or transmitter."

For body worn operation, this phone has been tested and meets the FCC RF exposure guidelines when used with the belt clip supplied with this product. Use of other accessories may not ensure compliance with FCC RF exposure guidelines.

Information for DECT Product



This telephone is compliant with the DECT 6.0 standard which operates in the 1.92GHz to 1.93GHz frequency range. Installation of this equipment is subject to notification and coordination with UTAM. Any relocation of this equipment must be coordinated through and approved by UTAM. UTAM may be contacted at 1-800-429-8826.

WARNING: TO PREVENT FIRE OR ELECTRICAL SHOCK HAZARD, DO NOT EXPOSE THIS PRODUCT TO RAIN OR MOISTURE.



 <p>THE LIGHTNING FLASH AND ARROW HEAD WITHIN THE TRIANGLE IS A WARNING SIGN ALERTING YOU OF "DANGEROUS VOLTAGE" INSIDE THE PRODUCT.</p>	<p>CAUTION: RISK OF ELECTRIC SHOCK DO NOT OPEN</p> <p>CAUTION: TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE COVER (OR BACK). NO USER SERVICEABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.</p>	 <p>THE EXCLAMATION POINT WITHIN THE TRIANGLE IS A WARNING SIGN ALERTING YOU OF IMPORTANT INSTRUCTIONS ACCOMPANYING THE PRODUCT.</p>
SEE MARKING ON BOTTOM / BACK OF PRODUCT		

Table of Contents

IMPORTANT INFORMATION	2	DESIRED GROUP	18
INTERFERENCE INFORMATION	2	SET GROUP RING.....	18
TELEPHONE NETWORK INFORMATION	2	CHANGING THE GROUP NAME.....	18
REN NUMBER	3	MANAGING SPEED DIALING RECORD	19
HEARING AID COMPATIBILITY (HAC)	3	ADDING THE SPEED DIALING NUMBER... ..	19
LICENSING	3	EDITING THE SPEED DIALING NUMBER... ..	19
FCC RF RADIATION EXPOSURE STATEMENT	3	DELETING THE SPEED DIALING NUMBER	19
INFORMATION FOR DECT PRODUCT	3	TRANSFERRING THE PHONE BOOK RECORD	
TABLE OF CONTENTS	5	BETWEEN HANDSET(S)	20
TABLE OF CONTENTS	6	CALL RECORDS	20
INTRODUCTION	7	RECEIVED CALLS	20
BEFORE YOU BEGIN	7	DIALED CALLS	21
PARTS CHECKLIST	7	ALARM	21
TELEPHONE JACK REQUIREMENTS.....	8	SET ALARM TIME.....	21
INSTALLATION	9	SNOOZE	22
DIGITAL SECURITY SYSTEM	9	SET CYCLE TIME.....	22
IMPORTANT INSTALLATION GUIDELINES	9	SET ALARM MELODY	22
HANDSET LAYOUT	10	SCHEDULER	23
BASE LAYOUT	11	ADDING A REMINDER.....	23
INSTALLING THE PHONE	11	SET SNOOZE.....	23
INSTALLING THE HANDSET BATTERY.....	11	SET CYCLE TIME.....	24
BASE STATION.....	12	SET ALARM MELODY.....	24
BLUETOOTH® SETUP	13	REVIEWING AND EDITING THE REMINDER	
CONNECT (AND PAIR)	13	RECORD	24
DISCONNECT	13	DELETING A REMINDER RECORD.....	25
RECONNECT	13	EXTRA FEATURES	25
PROGRAMMING INFORMATION	14	ROOM MONITORING	25
PROGRAMMING THE HANDSET	14	INTERCOM OPERATION	26
PHONE BOOK	14	HANDSET TO HANDSET INTERCOM CALL.....	26
ADDING PHONE BOOK ENTRIES.....	14	RECEIVING AN INTERCOM CALL	27
STORING THE LAST NUMBER DIALED	16	PUSH TO TALK	27
INSERTING A PAUSE IN THE DIALING		PHONE SETTING	27
SEQUENCE(OF A STORED NUMBER).....	16	LANGUAGE	28
REVIEWING PHONE BOOK RECORDS	16	SET DATE/TIME.....	28
EDITING A PHONE BOOK RECORD.....	17	SET AREA CODE.....	28
DELETING A PHONE BOOK RECORD.....	17	TONE/PULSE.....	29
MANAGING THE RECORD GROUPING IN PHONE		HANDSET NAME	29
BOOK.....	18	REGISTRATION	29
ADDING THE PHONE BOOK ENTRIES IN		GLOBAL DE-REGISTRATION	30
DESIRED GROUP	18	DEFAULT SETTING	31
DELETING THE PHONE BOOK ENTRIES IN		SOUND SETTING	31

Table of Contents

EQUALIZER	31	CALL TIMER	39
RINGER TONE	32	AUTO STAND-BY	39
RINGER VOLUME.....	32	FLASH/CALL WAITING	39
KEY TONE.....	32	LAST NUMBER REDIAL.....	39
BLUETOOTH®.....	33	PAGE.....	40
DEVICE INFO.....	33	PAGING FROM THE BASE/GROUP PAGE.....	40
AUTO CONNECT.....	33	MUTE.....	40
TELEPHONE OPERATION	34	RINGER VOLUME (SHORT-CUT).....	40
VISUAL INDICATORS	34	CALLER ID (CID).....	41
IN USE INDICATOR ON THE BASE	34	CALL WAITING CALLER ID.....	41
TALK INDICATOR AND SPKR INDICATOR ON		CID ERROR CODES.....	41
THE HANDSET	34	RECEIVING CID RECORDS.....	42
VMWI INDICATOR ON HANDSET.....	34	STORING CID RECORDS (IN CID MEMORY).....	42
SPEAKERPHONE OPERATION.....	34	REVIEWING CID RECORDS.....	42
VOLUME SETTINGS.....	34	DIALING A CID NUMBER.....	42
MAKING A CALL.....	34	FORMATTING A CID NUMBER BEFORE DIALING.....	43
LANDLINE CALLS.....	34	STORING CID RECORDS INTO PHONE BOOK....	44
CELLULAR CALLS	35	DELETING A CID RECORD.....	44
ANSWERING A CALL	35	CONNECTING THE BELT CLIP.....	45
LANDLINE CALLS.....	35	CONNECTING OPTIONAL HEADSET	45
CELLULAR CALLS	35	CHANGING THE BATTERY	45
RECEIVING A LANDLINE CALL DURING A		BATTERY SAFETY PRECAUTIONS	46
CELLULAR CALL	36	DISPLAY MESSAGES	46
RECEIVING A CELLULAR CALL DURING A		HANDSET SOUND SIGNALS	48
LANDLINE CALL	36	TROUBLESHOOTING GUIDE.....	48
RECEIVING LAND LINE CALL AND CELL CALL		TELEPHONE SOLUTIONS.....	48
SIMULTANEOUSLY.....	36	CALLER ID SOLUTIONS.....	50
AVAILABLE OPTIONS DURING A LANDLINE CALL	36	BATTERY SOLUTIONS.....	50
MORE.....	36	CAUSES OF POOR RECEPTION.....	51
HOLD.....	36	GENERAL PRODUCT CARE	51
INTERCOM	37	WARRANTY.....	52
AVAILABLE OPTIONS DURING A CELL CALL	37	ACCESSORY INFORMATION	53
MORE.....	37	INDEX	54
HOLD.....	37		
INTERCOM	37		
TRANSFER TO CELL.....	37		
CONFERENCE	38		
3-WAY CONFERENCE CALLS	38		
4-WAY CONFERENCE CALLS	38		

Introduction



 
CAUTION: When using telephone equipment, there are basic safety instructions that should always be followed. Refer to the **IMPORTANT SAFETY INSTRUCTIONS** provided with this product and save them for future reference.

IMPORTANT: Because cordless phones operate on electricity, you should have at least one phone in your home that isn't cordless, in case the power in your home goes out.


Before You Begin

Parts Checklist (for model 28127xx1)

Make sure your package includes the items shown here.




Base and
desktop stand

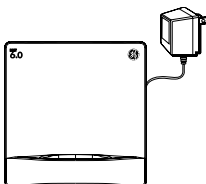


Charger




Telephone
line cord

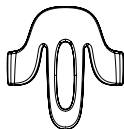


Belt clip

 


Battery compartment
cover

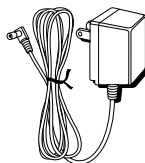

AC power
adaptor

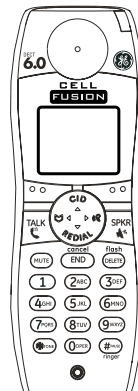

Handset

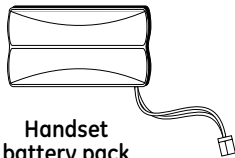

Handset
battery pack

For **Model 28127xx2** there will be **ONE** additional handset, charge cradle, belt clip, battery pack and cover than shown.

NOTE: if a headset is included in your package, it replaces one set of a handset, belt clip, battery pack and cover.

For **Model 28127xx3** there will be **TWO** additional handsets, charge cradle, belt clips, battery packs and covers than shown.

For **Model 28127xx4** there will be **THREE** additional handsets, charge cradle, belt clips, battery packs and covers than shown.


For **Model 28127xx5** there will be **FOUR** additional handsets, charge cradle, belt clips, battery packs and covers than shown.

For **Model 28127xx6** there will be **FIVE** additional handsets, charge cradle, belt clips, battery packs and covers than shown.

For **Model 28127xx7** there will be **SIX** additional handsets, charge cradle, belt clips, battery packs and covers than shown.

Telephone Jack Requirements

To use this phone, you need an RJ11C type modular telephone jack, which might look like the one pictured here, installed in your home. If you don't have a modular jack, call your local phone company to find out how to get one installed.

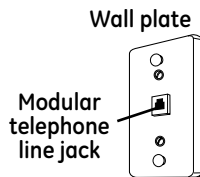

Installation

Digital Security System

Your cordless phone uses a digital security system to protect against false ringing, unauthorized access, and charges to your phone line.


INSTALLATION NOTE: Some cordless telephones operate at frequencies that may cause or receive interference with nearby TVs, microwave ovens, and VCRs. To minimize or prevent such interference, the base of the cordless telephone should not be placed near or on top of a TV, microwave ovens, or VCR. If such interference continues, move the cordless telephone farther away from these appliances.

Certain other communications devices may also use the 1.9 GHz frequency for communication, and, if not properly set, these devices may interfere with each other and/or your new telephone. If you are concerned with interference, please refer to the owner's manual for these devices on how to properly set channels to avoid interference. Typical devices that may use the 1.9 GHz frequency for communication include wireless audio/video senders, wireless computer networks, multi-handset cordless telephone systems, and some long-range cordless telephone systems.


Important Installation Guidelines

- Avoid sources of noise and heat, such as motors, fluorescent lighting, microwave ovens, heating appliances and direct sunlight.
- Avoid areas of excessive dust, moisture and low temperature.
- Avoid other cordless telephones or personal computers.
- Never install telephone wiring during a lightning storm.
- Never install telephone jacks in wet locations unless the jack is specifically designed for wet locations.
- Never touch non-insulated telephone wires or terminals, unless the telephone line has been disconnected at the network interface.
- Use caution when installing or modifying telephone lines.

Handset Layout

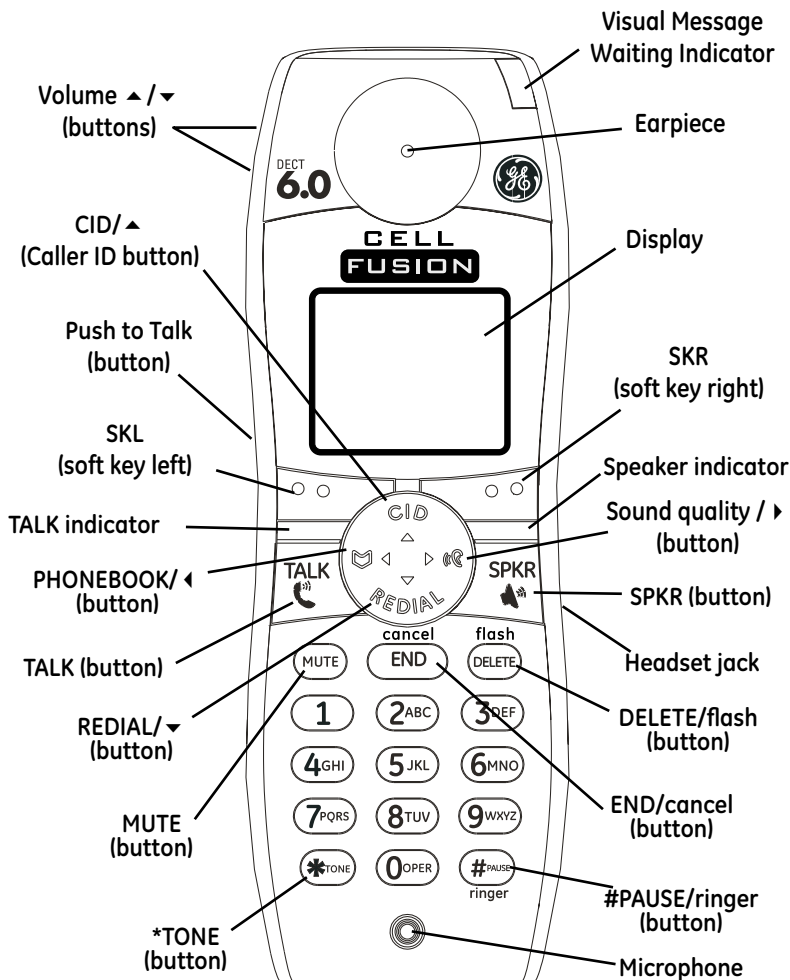

Base Layout

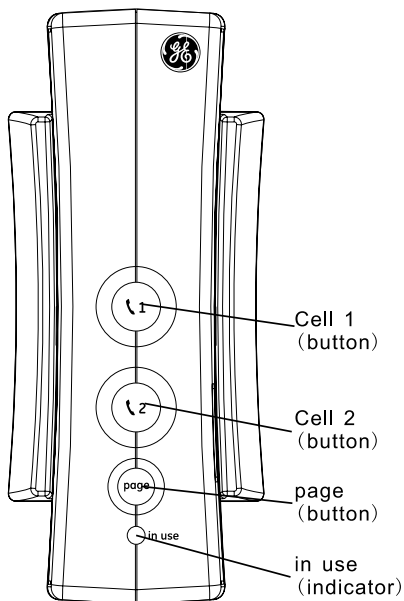

Installing the Phone

Installing the Handset Battery


NOTE: You must connect the handset battery before using the cordless handsets.



CAUTION: To reduce the risk of fire or personal injury, use only the Thomson Inc. approved model 5-2840 Nickel-metal Hydride battery (Ni-MH), which is compatible with this unit.

1. Locate battery and battery door which are packaged together inside a plastic bag and are separate from the handset.
2. Locate the battery compartment on the back of the handset.
3. Plug the battery pack cord into the jack inside the compartment.


NOTE: To ensure proper battery installation, the connector is keyed and can be inserted only one way.

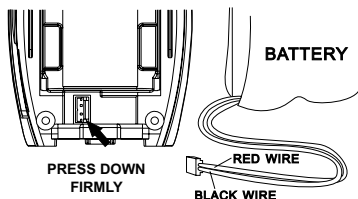

4. Insert the battery pack.
5. Close the battery compartment by pushing the door up until it snaps into place.
6. Place the handset in the charging cradle. **Allow handset to charge for 16 hours prior to first use. If you do not properly charge the handset, battery performance is compromised.**



Base Station

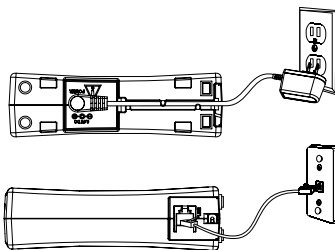1. Choose an area near an electrical outlet and a telephone wall jack (RJ11C), and place your cordless telephone on a level surface, such as a desktop or tabletop.
2. Plug one end of the telephone line cord into the TEL LINE jack on the bottom of the base and the other end into a modular jack.
3. Plug the AC power converter into the electrical outlet and the DC connector into the jack on the bottom of the base.
4. Place the handset in the charge cradle. The Charge indicator turns on, verifying the battery is charging.



NOTE: After the Handset and Base have been powered up, the handset displays the Date/Time set up screen for entry. You MUST enter the date/time prior to operating the unit.

5. Use the number keys to enter the year and the date.
6. Press the **Next (SKL)** button to move to **Set Time** menu.

7. Use the number keys to enter the time and use the  or  button to select **AM** or **PM**.
8. Press the **Store (SKL)** button to save the settings. You will hear a confirmation tone.
9. **Allow the phone to charge for 16 hours prior to first use. If you don't properly charge the phone, battery performance is compromised.**



CAUTION: To reduce risk of personal injury, fire or damage use only the 5-2812 power adaptor listed in the user's guide. This power adaptor is intended to be correctly orientated in a vertical or floor mount position.

BlueTooth® Setup

This unit supports a maximum of two Bluetooth cell phone devices. To use your Bluetooth cell phone device with the 28127 System, you must activate Bluetooth on your device and then pair the device to the base.

NOTE: Your Bluetooth cell phone device should be within 2 feet to 10 feet from the base. If the device is too close it may create undesired noise. If device is too far it will not pair.

Connect (and pair)

1. Make sure your phone is **OFF** (not in talk mode).
2. Press and hold the **CELL 1** or **CELL 2** button on base until the corresponding LED flashes. (refer to the instruction manual for your cell phone device on the proper procedure to add and pair a new device)

When "CELL FUSION" is shown on the device.

3. Use the number keys to enter the default PIN 0000 on your Bluetooth cell phone device. When the device is paired successfully, the corresponding LED illuminates.

Disconnect

Press and hold the **CELL 1** or **CELL 2** button to disconnect the Bluetooth cell phone. The **CELL 1** or **CELL 2** indicator will no longer be illuminated.



Reconnect

Press and release the **CELL 1** or **CELL 2** button again and the connection will resume.

NOTE: Certain cell phones may require an acceptance to allow reconnection.

Programming Information

The handset menus give you access to all of the built-in features.

Press the Menu (SKL) button to display the menu options, then press the  or  button to navigate to the desired option. Press the **Select (SKL)** button to activate a menu option. For details on programming, refer to the applicable section. During programming, you may press the **Back (SKR)** button at any time to exit the menu and keep the previous setting.

NOTE: You can press the END/cancel button at any time to go back to standby mode.

Text Entry: Use the number keys to enter characters. More than one letter is stored in each of the number keys. For example, press the 2 key twice for the letter B. Press the 1 key to insert a space. Press the ***TONE** button to toggle between upper and lower case.

NOTE: If you make a mistake, use the DELETE/flash button to backspace and delete one character at a time.

Programming The Handset

There are eight programmable menus available: Phone book, Call records, Alarm, Scheduler, Extra Features, Phone setting, Sound settings and Bluetooth.

Phone Book

NOTE: At any time you may press the END/cancel button on handset to exit and return to stand-by mode.

Each handset can store up to two hundred entries in phone book for quick dialing, each entry can contain a maximum of 20-digit numbers and 15-character names.

Adding Phone Book Entries



For each entry you can enter up to 4 separate numbers and then assign a specific melody. The melody will **ONLY** work if you have subscribed to the Caller ID service. Then when that person calls, the assigned melody will ring instead of the normal ring. You may choose from 5 different ring tones.

1. Make sure your phone is **OFF** (not in talk mode).
2. Press the **Menu (SKL)** button and use the  or  button to scroll to **Phone Book**.

NOTE: You may press the  button to short-cut to the phone book.

3. Press the **Select (SKL)** button to enter the phone book.



NOTE: If there are no records stored you will go directly to the Add Record menu.

4. Press the **Option (SKL)** button to enter submenu.
5. Use the  or  button to scroll to **Add Record**.
6. Press the **Select (SKL)** button to confirm. Phone book memory space shows on the display for 2 seconds. The screen displays **Enter Name**.
7. Use the number keys to enter a name (up to 15 characters, including spaces). More than one letter is stored in each of the number keys. (The number 1 key can be used to enter "space", "-", "/*", and "!")





NOTE: Use the */TONE button to toggle between upper case/lower case text entry.

8. Press **Next (SKL)** button to move to save the name and proceed to **Enter Number** screen.
9. Use the number keys to enter the telephone number (up to 20 digits).

NOTE: If you make a mistake press the DELETE/flash button to backspace and erase the wrong character(s).

10. Use the  or  button to select from the desired category; **Home, Office, Cell** or **Other**.
11. Press the **Store (SKL)** button to save the number.

- Add an additional Number to record (Up to 4 numbers)

- Use the  or  button to scroll to **Add Number**.
- Press the **Edit (SKL)** button to confirm.
- Use number keys to enter the telephone number.
- Use the  or  button to select from the desired category.
- Press the **Store (SKL)** button to save the number.






12. Use the  or  button scroll to **Ring Tone**.

13. Press the **Edit (SKL)** button and use the  or  button to scroll to desired ringtone.

14. Press the **Select (SKL)** button to confirm.

Storing the Last Number Dialed

Store a dialed number when reviewing it:



1. Make sure the phone is **OFF** (not in talk mode).
2. Press the  button on the handset to access the **Dialed Calls** menu.
3. Use the  or  button to scroll to desired record.
4. Press the **Store (SKL)** button to save the number.
5. Use the  or  button to select from the desired category; **Home, Office, Cell** or **Other**.
6. Press the **Select (SKL)** button to confirm. The screen displays **Enter Name**.
7. Use the number keys to enter a name (up to 15 characters, including spaces). More than one letter is stored in each of the number keys. (The number 1 Key can be used to enter "space", "-", "*" and "!")
8. Press the **Store (SKL)** button to save the record.

Inserting a Pause in the Dialing Sequence (of a Stored Number)

Press the **#PAUSE/ringer** button on the handset to insert a delay in dialing sequence of a stored number when a pause is needed to wait for a dial tone (for example, after you dial 9 for an outside line, or to wait for a computer access tone.) Each pause counts as one digit in the dialing sequence.

You can press the **#PAUSE/ringer** button to insert a P (pause) when you enter the telephone number when adding a phone book entry.

Reviewing Phone Book Records

1. Make sure your phone is **OFF** (not in talk mode).
2. Press the **Menu (SKL)** button and use the  or  button to scroll to **Phone Book**.
3. Press the **Select (SKL)** button to enter the phone book.

NOTE: You may press the  button to short-cut to the phone book, too.

4. Use the  or  button to scroll the records







- OR -

Press the number keys to go to the name of the records started with the corresponding character.





NOTE: Your phone book records are sorted automatically in alphabetical order.

5. Press the **Option (SKL)** button to view the details of the record.

Editing a Phone Book Record

1. When reviewing the phone book records list, use the  or  button to scroll to the desired record or enter the first character of name for alphabetical search.
2. Press **Option (SKL)** button to access the option menu.
3. Use the  or  button to scroll to **Edit Record**.
4. Press the **Edit (SKL)** button to confirm. The screen displays the detail information of desired record.
5. Use the  or  button to scroll to desired edit item.
6. Press the **Select (SKL)** button.
7. The steps to edit are the same as steps in the section Adding Phone Book Entries.
 - Step 7 if you are editing the name.
 - Step 9 if you are editing the number.
 - Step 11 if you are editing the category.
 - Step 12 VIP ring you are editing the VIP ring tone.








Deleting a Phone Book Record

1. When reviewing the phone book records list, use the  or  button or the number keys to scroll to the desired record.
2. Press **Option (SKL)** button to access the option menu.
3. Use the  or  button to scroll to **Delete Record**.
4. Press the **Select (SKL)** button. The screen displays **DELETE?**.
5. Press the **Yes (SKL)** button to confirm the deletion. The screen displays **DELETED**.

NOTE: If you don't want to change or delete the record when the screen displays *DELETE?*, simply press the No (SKR) button, or wait for one minute to exit the review mode automatically.



Managing the Record Grouping in Phone Book

This enables you to group a selection of records together, then specify a certain ringtone for the group.

1. Make sure your phone is **OFF** (not in talk mode).
2. Press the  button to short-cut to phone book menu.
3. Use the  or  button to scroll to desired record.
4. Press the **Option (SKL)** button to access the Option menu.
5. Use the  or  button to scroll to **Grouping**.
6. Press the **Select (SKL)** button and use the  or  button to select desired group.
7. Press the **Select (SKL)** button to confirm. The screen displays 5 items for grouping.



Adding the Phone Book Entries In Desired Group

From the **GROUPING** menu:

1. Use the  or  button to select the **Add Member** menu.
2. Press the **Select (SKL)** button to confirm the selection.





Deleting the Phone Book Entries In Desired Group

From the **GROUPING** menu:

1. Press the **Option (SKL)** button and use the  or  button to scroll to **Delete Member**.
2. Press the **Select (SKL)** button to confirm the selection.

Set Group Ring

From the **GROUPING** menu:

1. Press the **Option (SKL)** button and use the  or  button to scroll to **Set Group Ring**.
2. Use the  or  button to scroll to desired ring tone.
3. Press **Select (SKL)** button to confirm the **selection**.

Changing the Group Name

From the **GROUPING** menu:

1. Press **Option (SKL)** button and use the  or  button to scroll to **Rename**.








2. Use the number keys to enter a name (up to 15 characters, including space.)

NOTE: If you make a mistake press the DELETE/flash button to backspace and erase the wrong character(s).










3. Press the **Store (SKL)** button to save the new group name.

Managing Speed Dialing Record



Adding the Speed Dialing Number

1. Make sure your phone is **OFF** (not in talk mode).
2. Press the  button to short-cut to phone book menu.
3. Use the  or  button to scroll to desired record.
4. Press the **Option (SKL)** button to access the option menu.
5. Use the  or  button to scroll to **Speed Dialing**.
6. Press the **Select (SKL)** button and use the  or  button to select desired location. (Up to 10 locations, 0 to 9)
7. Press the **Select (SKL)** button to confirm.

Editing the Speed Dialing Number








1. Make sure your phone is **OFF** (not in talk mode).
2. Press the  button to short-cut to phone book menu.
3. Press the **Option (SKL)** button to access the option menu.
4. Use the  or  button to scroll to **Speed Dialing**.
5. Press the **Select (SKL)** button and use the  or  button to select desired location.
6. Press the **Option (SKL)** button to access the option menu.
7. Use the  or  button to scroll to **Edit Number**.
8. Press the **Select (SKL)** button. The screen displays the phone book records.
9. Use the  or  button to scroll to desired record.
10. Press **Select (SKL)** button to confirm the selection.

Deleting the Speed Dialing Number

1. Follow steps 1 to 6 in section “Editing the Speed Dialing Number”.
2. Use the  or  button to scroll to **Delete Number**.



3. Press the **Select (SKL)** button. The screen displays **DELETE?**.
4. Press the **Yes (SKL)** button to confirm the selection. The screen displays **DELETED**.

Transferring the Phone book record between handset(s)

1. Make sure your phone is **OFF** (not in talk mode).
2. Press the  button to short-cut to phone book menu.
3. Use the  or  button to scroll to desired record.
4. Press the **Option (SKL)** button to access the option menu.
5. Use the  or  button to scroll to **Transfer Record**.
6. Press the **Select (SKL)** button and the screen displays the list of registered handsets.
7. Use the  or  button to scroll to desired handset.
8. Press the **Select (SKL)** button to confirm the selection. After the transfer process finish, the screen displays **Successful**.







Call Records

This option allows you to redial the number from a CID records or Dialed calls. There are maximum 40 CID records and 10 dialed calls stored in handset unit.

1. Make sure your phone is **OFF** (not in talk mode).
2. Press the **Menu (SKL)** button to enter the main menu.
3. Use the  or  button to scroll to **Call Records**.
4. Press the **Select (SKL)** button to enter the submenu.

Received Calls





From the **CALL RECORDS** menu:

1. Use the  or  button to scroll to **Received Calls**.
2. Press the **Select (SKL)** button to confirm, a total of **All** calls and **New** calls displays.
3. Press the **View (SKL)** button and the calls are shown in the order of the most recent date & time the calls was received.
4. Press the  or  button to scroll to the records for desired record
5. Press the **More (SKL)** button to see more options.
6. Press the  or  button to select **Format** or **Store**.

7. Press the **Select (SKL)** button to confirm the option. (If **Store** is selected, please refer to the Phone Book section of the manual for detailed information.)
8. Press the **Format (SKL)** button repeatedly to scroll through the formats available for selection. When it is on the preferred format, press the **Back (SKR)** button to return to review mode.
9. Press the **TALK** or **SPKR** button to dial out the number on the land line or press the **Cell (SKR)** button to dial out the number on the cell phone.





Dialed Calls

From the **CALL RECORDS** menu:

1. Use the  or  button to scroll to **Dialed Calls**.
2. Press the **Select (SKL)** button to confirm, a listing of all calls display.
3. Press the  or  button to scroll to the desired number.
4. Press the **TALK** or **SPKR** button to dial out the number on the land line or press the **Cell (SKP)** button to dial out the number on the cell phone.

Alarm

Set an alarm, then program the snooze time, occurrences, and melody preferences.



1. Make sure your phone is **OFF** (not in talk mode).
2. Press the **Menu (SKL)** button to enter the main menu.
3. Use the  or  button to scroll to **ALARM**.
4. Press the **Select (SKL)** button to enter the submenu. The screen displays **Alarm on/off**.
5. Use the  or  button to scroll to **On** or **Off**.
6. Press the **Select (SKL)** button to save your selection. You will hear a confirmation tone.

Set Alarm Time

NOTE: Alarm must be activated to set time.





From the **ALARM On** menu:

1. Press the **Select (SKL)** button to enter the menu. The screen displays **Set Alarm**.

2. Use number keys to enter the time, then use the  or  button to select **AM** or **PM**. The default setting is 12:00AM.
3. Press the **Store (SKL)** button to save your setting. You will hear a confirmation tone.





Snooze

From the **ALARM On** menu:

1. Use the  or  button to scroll to **Snooze: Off**.
2. Press the **Select (SKL)** button to enter the menu. The screen displays **Snooze On/Off**.
3. Use the  or  button to select from **Off**, **Every 5 minutes**, **Every 10 minutes**, **Every 15 minutes** or **Every 30 minutes**. The default setting is **Off**.
4. Press the **Store (SKL)** button to save your selection. You will hear a confirmation tone.

Set Cycle Time





From the **ALARM On** menu:

1. Use the  or  button to scroll to **Cycle: Once**.
2. Press the **Select (SKL)** button to enter the menu.
3. Use the  or  button to select **Once** or **Daily**. The default setting is **Once**.
4. Press the **Store (SKL)** button to save your selection. You will hear a confirmation tone.

NOTE: If you select **Daily**, the system will follow the current time setting to turn on the alarm.



Set Alarm Melody

From the **ALARM On** menu:

1. Use the  or  button to scroll to **Alarm Melody**.
2. Press the **Select (SKL)** button to enter the menu.
3. Use the  or  button to select desired melody.
4. Press the **Select (SKL)** button to save your selection. You will hear a confirmation tone.





Scheduler

This feature allows you to set the reminder events by using the calendar.

1. Make sure your phone is **OFF** (not in talk mode).
2. Press the **Menu (SKL)** button to enter the main menu.
3. Use the  or  button to scroll to **Scheduler**.
4. Press the **Select (SKL)** button to enter the submenu.





Adding a Reminder

From the *Scheduler* menu

1. Use the  or  button to scroll to **Add Reminder**.
2. Press the **Select (SKL)** button to enter the **Set Date** menu. The screen displays **Year** and **Date**.
3. Use the number keys to enter the year and date desired for the reminder.
4. Press **Next (SKL)** button to move to **Set Time** menu.
5. Use the number keys to enter the time and use the  or  button to select **AM** or **PM**.
6. Press the **Store (SKL)** button to save the setting.
7. Press the **Select (SKL)** button to enter **Reminder Message** menu.
8. Use the number keys to enter the text content (up to 96 characters).
9. Press the **Store (SKL)** button to save the information. You will hear a confirmation tone. You may now program the snooze time, occurrences and melody preferences for your reminder.





Set Snooze

From the *Add Reminder* menu:

1. Use the  or  button to scroll to **Snooze On/Off**.
2. Press the **Select (SKL)** button to enter the menu.
3. Use the  or  button to select from **Off**, **Every 5 minutes**, **Every 10 minutes** or **Every 30 minutes**. The default setting is **Off**.
4. Press the **Store (SKL)** button to save your selection. You will hear a confirmation tone.

Set Cycle Time





From the *Add Reminder* menu:

1. Use the  or  button to scroll to **Cycle**.
2. Press the **Select (SKL)** button to enter the menu.
3. Use the  or  button to select **Once, Daily, Weekly, Monthly or Yearly**.
The default setting is *Once*.
4. Press the **Select (SKL)** button to save your selection. You will hear a confirmation tone.

NOTE: The system will follow the current time setting to turn on the alarm.







Set Alarm Melody

From the *Add Reminder* menu:

1. Use the  or  button to scroll to **Melody**.
2. Press the **Select (SKL)** button to enter the menu.
3. Use the  or  button to select desired melody.
4. Press the **Select (SKL)** button to save your selection. You will hear a confirmation tone.







Reviewing and Editing the Reminder Record

From the *Scheduler* menu:

1. Use the  or  button to scroll to **View Reminder**.
2. Press the **Select (SKL)** button to enter the menu. The screen displays the reminder records.
3. Use the  or  button to select the desired record and press the **Select (SKL)** button to view the record detail.
4. Press the **Option (SKL)** button to enter the option menu.
5. Use the  or  button to scroll to **Edit Reminder**.
6. Repeat steps 3 through 8 in "Adding a Reminder".



Deleting a Reminder Record

From the *Scheduler* menu:

1. Use the  or  button to scroll to **View Reminder**.
2. Press the **Select (SKL)** button to enter the menu. The screen displays the reminder records.
3. Use the  or  button to select the desired record and press the **Select (SKL)** button to view the record details.
4. Press the **Option (SKL)** button to enter the option menu.
5. Use the  or  button to scroll to **Delete Reminder**.
6. Press the **Option (SKL)** button to enter the menu. The screen displays **DELETE?**.
7. Press the **Yes (SKL)** button. You will hear a confirmation tone.





Extra Features

In the extra features Menu, there are three programmable submenus: Room Monitoring, Intercom and Push to Talk.

1. Make sure you handset is **OFF** (not in talk mode).
2. Press the **Menu (SKL)** button to enter the menu.
3. Use the  or  button to scroll to **Extra Features**.
4. Press the **Select (SKL)** button to enter the submenu.

Room Monitoring

From the *Extra Features* menu:

1. Use the  or  button to scroll to **Room Monitoring**.
2. Press the **Select (SKL)** button and the screen displays all the list of registered handsets.
3. Use the  or  button to scroll to the desired handset. Press the **Select (SKL)** button to confirm.

NOTE:

1) If handsets have been named, then the name will be displayed on the screen instead of handset numbers.

2) During the room monitoring, it will emit a beep tone if there are incoming calls. You may press the TALK or SPKR button on the handset to answer the call and quit the room monitor mode.





4. Press the **Back (SKR)** button to end room monitoring.

Intercom Operation

The intercom feature allows you to have a conversation with another registered handset without tying up the telephone line, allowing you to still receive incoming calls.

Handset to Handset Intercom Call

Form the Extra Features menu:

1. Use the  or  button to scroll to *Intercom*.
2. Press the **Select (SKL)** and the screen displays a list of registered handsets.
3. Use the  or  button to scroll to the desired handset. Press the **Select (SKL)** button to confirm.
4. The receiving handset is paged and emits a tone.

NOTE: To cancel the page, press the Back (SKL) button or the END/cancel button on the originating handset.

5. Wait for the person at the receiving handset to press the **Answer (SKL)** button.

NOTE: If the receiving handset does not answer within two minutes, the intercom call is automatically cancelled and the originating handset displays NO ANSWER.

6. When finished, press the **Back (SKR)** or **END/cancel** button on handset to deactivate the intercom.

NOTE: The system is expandable up to 7 handsets (by purchase of optional Model 28107 handset with recharge cradle). When 7 handsets are registered, the system can handle 2 separate intercom operations simultaneously. For example, 1st handset intercoms with 2nd handset while 3rd handset intercoms with 4th handset.

Receiving an Intercom Call





When you receive an intercom call, your handset beeps. To answer the call press the **Answer (SKL)** button on the handset.

NOTE: If you receive a telephone call during an intercom call, the intercom call is immediately terminated and the handset rings.



Press the TALK or SPKR button on the handset to answer the call.

Push to Talk

This feature allows you to directly talk to another registered handset by pressing the **Push to Talk** button.



1. Make sure your phone is **OFF** (not in talk mode).
2. Press the **Menu (SKL)** to enter the main menu.
3. Use the  or  button to scroll to **Extra Features**.
4. Press the **Select (SKL)** button to enter the menu.
5. Use the  or  button to scroll to **Push To Talk**.

NOTE: You may press the Push to Talk button on side of the handset to short-cut to the menu.

6. Press the **Select (SKL)** button to enter the menu. The screen displays the list of registered handset and base.
7. Use the  or  button to select desired handset.
8. Press the **Select (SKL)** button to save your selection.
9. Press and hold the **Push to Talk** button to connect with the desired handset.

Phone Setting





There are eight programmable menus available: Language, Set Date/Time, Set Area Code, Tone/Pulse, Handset Name, Registration, Deregistration and Default Setting.

1. Make sure your phone is **OFF** (not in talk mode).
2. Press the **Menu (SKL)** button to enter the menu.
3. Use the  or  button to scroll to **Phone Setting**.
4. Press the **Select (SKL)** button to enter the submenu.

Language





This menu allows you to change the language of the display prompts on the handset.

From the **PHONE SETTING** menu:

1. Use the  or  button to scroll to **Language**.
2. Press the **Select (SKL)** button to enter the menu.
3. Use the  or  button to scroll to the desired language. The default is *English*.
4. Press the **Select (SKL)** button to save your selection. You will hear a confirmation tone.

Set Date/Time



From the **PHONE SETTING** menu:

1. Use the  or  button to scroll to **Set Date/Time**.
2. Press the **Select (SKL)** button to enter the menu. The screen displays **Set Date**.
3. Use the number keys to enter the year and date.
4. Press the **Next (SKL)** button to move to time setup.
5. Use the number keys to enter the time and the  or  button to select **AM** or **PM**.
6. Press the **Store (SKL)** button to save the setting. You will hear a confirmation tone.

Set Area Code

If you enter your local 3-digit area code in the area code menu, your local area code does not display on the Caller ID (CID) list. Instead, you only see the local 7-digit number. Calls received from outside your local area code will display the full 10-digits





From the **PHONE SETTING** menu:

1. Use the  or  button to scroll to **Set Area Code**.
2. Press the **Select (SKL)** button to enter the menu.
3. Use the number keys to enter your 3 digit area code. The default setting is " - - -".
4. Press the **Store (SKL)** button to save the setting. You will hear a confirmation tone.

NOTE: To restore the default setting to "---", press and release the DELETE/flash button when the screen displays Set Area Code.

Tone/Pulse



From the *Phone Setting* menu:

1. Use the  or  button to scroll to **Tone/Pulse**.
2. Press the **Select (SKL)** button to enter the menu.
3. Use the  or  button to select **Tone** or **Pulse**. The default is **Tone**.
4. Press the **Select (SKL)** button to save your selection. You will hear a confirmation tone.

Handset Name

This menu allows you to enter a name for the handset, which displays on the idle screen.

From the *PHONE SETTING* menu:



1. Use the  or  button to scroll to **Handset Name**.
2. Press the **Select (SKL)** button to enter the menu.
3. Use the number keys to enter a name (up to 15 characters). More than one letter is stored in each of the number keys. For example, to enter Bill Smith, press the 2 key twice for the letter B. Press the 4 key 3 times for the letter I. Press the 5 key 3 times for the letter L. Wait for 1 second, press the 5 key 3 times for the second letter L, and press the 1 key to insert a space between the first and last name. Press the 7 key 4 times for the letter S; press the 6 key once for the letter M; press the 4 key 3 times for the letter I. Press the 8 key for the letter T; press the 4 key twice for the letter H.
4. Press the **Store (SKL)** button to save your setting. You will hear a confirmation tone.



NOTE: If you make a mistake, use the DELETE/flash button to backspace and delete one character at a time.

Registration

Your packaged handset(s) are pre-registered and ready to use. It is not recommended that a handset be registered again unless absolutely necessary. If you must re-register a handset use the directions below.





From the *PHONE SETTING* menu:

1. Press and hold the **Page** button on the base until the in use indicator flashes.
2. Use the  or  button to scroll to **Registration**.

3. Press the **Select (SKL)** button to enter the menu.
4. Use the  or  button to scroll to **No** or **Yes**. The default is **NO**.
5. Press the **Select (SKL)** button to save your selection.
6. If you select **Yes**. The screen displays **PRESS AND HOLD BASE PAGE KEY**. (Your handset should be held near the base during registration process.) If the registration is successful, the screen displays **REGISTRATION SUCCESSFUL**. You may now rename your handset.

Deregistration

From the **PHONE SETTING** menu;

1. Use the  or  button to scroll to **Deregistration**.
2. Press the **Select (SKL)** button to enter the menu.
3. Use the  or  button to scroll to **No** or **Yes**. The default is **No**.
4. Press the **Select (SKL)** button to save your selection.
5. If you select **Yes**. The handset will automatically be deregistered. The screen displays **Successful Deregistration**, followed by **HANDSET NEEDS REGISTRATION**.
6. You must re-register the handset to main base through the handset using Phone Setting Registration menu before use.

Global De-Registration

If one or more handsets become lost, you should deregister all handsets to ensure proper system operation. Follow the steps below to deregister all handsets at the same time.

WARNING: It is not recommended that a handset be deregistered unless absolutely necessary because once a handset is deregistered, that handset's telephone features cannot be used until the handset is re-registered.

NOTE: Before starting global deregistration procedure, let all handsets set idle for 20 seconds.





1. Disconnect the power from the base by unplugging the DC connector on back of base.
2. Press and hold the **Page** button on the base and reconnect the power.
3. Hold the **Page** button until the in use indicator flashes rapidly.

4. Release the **Page** button.
5. Press and release the **Page** button on the base once. All handsets are deregistered and the screen displays **HANDSET NEEDS REGISTRATION**.

Default Setting



This option allows you to return the handset to factory preset settings.

From the Phone Setting menu:

1. Use the  or  button to scroll to **Default Setting**.
2. Press the **Select (SKL)** button to enter the menu.
3. Use the  or  button to scroll to **No** or **Yes**. The default is **No**.
4. If you select **Yes**, all the settings in the programmable menu are returned to factory default setting. Press the **Select (SKL)** button to save your selection. You will hear a confirmation tone.

Sound Setting






There are four programmable menus available: Equalizer, Ring Tone, Ring Volume and Key Tone.

1. Make sure your phone is **OFF** (not in talk mode).
2. Press the **Menu (SKL)** button and use the  or  button to scroll to **Sound Setting**.
3. Press the **Select (SKL)** button to enter the menu.

Equalizer

This feature lets you to adjust the audio quality.





From the Sound Setting menu:

1. Use the  or  button to scroll to **Equalizer**.
NOTE: You may press the  button from standby to shortcut to the Equalizer menu.
2. Press the **Select (SKL)** button to enter the menu.
3. Use the  or  button to scroll to desired selection. The default is **NATURAL**.
4. Press the **Select (SKL)** button to save your selection. You will hear a confirmation tone.

Ringer Tone

You may choose from the 15 preset melodies and 5 dual-tone ringer tones.





From the *Sound Setting* menu:

1. Use the  or  button to scroll to ***Ringer Tone***.
2. Press the **Select (SKL)** button to enter the menu.
3. Use the  or  button to scroll to the desired ringer tone. The default is *MELODY 1*.
4. Press the **Select (SKL)** button to save your selection. You will hear a confirmation tone.

Ringer Volume

You may choose ringer setting from this menu.

From the *Sound Setting* menu:





1. Use the  or  button to scroll to ***Ringer Volume***.
2. Press the **Select (SKL)** button to enter the menu.
3. Use the  or  button to scroll to the desired ringer volume. The default is *Volume 5*.
4. Press the **Select (SKL)** button to save your selection. You will hear a confirmation tone.

NOTE: If you turn the ringer **OFF**, the screen displays ***Ringer Off***.



Key Tone

This feature allows you to set the key tone volume.

From the *Sound Setting* menu:



1. Use the  or  button to scroll to ***Key Tone***.
2. Press the **Select (SKL)** button to enter the menu.
3. Use the  or  button to scroll to the desired key tone volume. The default is *Level 3*.
4. Press the **Select (SKL)** button to save your selection. You will hear a confirmation tone.

Bluetooth®

1. Make sure your handset is **OFF** (not in talk mode).
2. Press the **Menu (SKL)** button to enter the main menu.
3. Use the  or  button to scroll to **Bluetooth**.
4. Press the **Select (SKL)** button to enter the sub-menu. There are two programmable menus: **Device Info** and **Auto Connect**.

Device Info





From the **Bluetooth** menu:

1. Use the  or  button to scroll to **Device Info**.
2. Press the **Select (SKL)** button to enter the sub-menu. The screen displays a list of registered devices.
3. Press the Exit (SKR) button to exit.

Auto Connect

Enable or disable the auto connect function of the base Bluetooth to registered cell phone.

From the **Bluetooth** menu

1. Use the  or  button to scroll to **Auto Connect**.
2. Press the **Select (SKL)** button to enter the sub-menu.
3. Use the  or  button to scroll to **On** or **Off**. The default is **On**.
4. Press the **Select (SKL)** button to save your selection. You will hear a confirmation tone.

Telephone Operation

Visual Indicators

IN USE Indicator on the Base

The IN USE indicator is lit when the phone is in use. It flashes when you receive a call.

TALK Indicator and SPKR Indicator on the Handset

The **TALK** Indicator or **SPKR** Indicator is lit when the handset is in use. It flashes when you receive a call.

VMWI Indicator on Handset

IMPORTANT: In order to use this unit's Visual Message Waiting Indicator (VMWI) feature, you must subscribe to this service from your phone company.

The VMWI indicator on the top of the handset flashes when you receive a new message from your service provider.

Speakerphone Operation

NOTE: If you are using the speakerphone, remain close to handset so the party you are speaking to can hear you.

- If you are using the handset and want to switch to the speakerphone, press the **SPKR** button, press the **END/cancel** button to end conversation.
- If you are using the speakerphone and want to switch to the handset, press the **TALK** button, press the **END/cancel** button to end conversation.

Volume Settings

When the handset is **ON** (in talk mode), you may adjust the receiver volume by pressing the **VOLUME ▼** or **▲** button on the side of the handset. There are four volume levels to choose from. When the maximum or minimum volume level is reached, the phone beeps twice. **VOL 1** is minimum and **VOL 4** is maximum.



Making a Call

Landline Calls

1. Press the **TALK** or **SPKR** button on handset. Dial the desired number.
-OR-

Dial the number and then press the **TALK** or **SPKR** button on handset.

-OR-

Press the  or  button to select the desired record, then press the **TALK** or **SPKR** button on handset.

-OR-

Press and hold the number key to get the corresponding speed dialing number.

2. When finished, press the **END/cancel** button on the handset to hang up.



NOTE: You may enter up to 32 pre-dial digits.

NOTE: If you want to delete the pre-dial number you entered, press the DELETE/flash button until all of the digits are erased.

NOTE: To set the speed dialing number, refer to section "Phone Book -> Adding the Speed Dialing Number".

Cellular Calls

1. In standby mode, dial the desired number, press **Cell (SKR)** button.

NOTE: If more than one bluetooth cell phone device is connected use the  or  button to select the desired device.

2. Press **Select (SKL)** button to confirm.
4. Press the **END/cancel** button when finished.

Answering a Call

Check the display to see who is calling.

Landline Calls

1. Pick up the handset, and press the **TALK** or **SPKR** button on the handset.
2. When finished, press the **END/cancel** button on the handset, or place the handset in the cradle.

Cellular Calls

1. Pick up the handset, and press the **Cell (SKR)** button on the handset.
2. When finished, press the **END/cancel** button on the handset, or place the handset in the cradle.

Receiving a Landline Call during a Cellular Call

During a cellular call, if you receive an incoming landline call.

1. Press the **Line (SKR)** button to answer the incoming call and the cellular call will be on hold.
2. Press the **SPKR** button, the cellular call will switch to speakerphone mode.
3. To switch between the two calls, press the **Line (SKR)** button while landline call is on hold, press the **Cell (SKR)** button while cellular call is on hold.

Receiving a Cellular Call during a Landline Call

During a landline call, if you receive an incoming cellular call.

1. Press the **Cell (SKR)** button to answer the incoming cellular call and the land line call will be on hold.
2. Press the **SPKR** button, the landline call will switch to speakerphone mode.
3. To switch between the two calls, press the **Line (SKR)** button while landline call is on hold, press the **Cell (SKR)** button while cellular call is on hold.

Receiving Land line Call And Cell Call Simultaneously

If both landline call & Cell call rings at the same time, **Incoming Call** and **Incoming Cell Call** flash alternatively for 1 second before CID information comes up.

1. To answer the incoming landline call, press the **TALK** button on handset.
2. To answer the cellular call, press the **Cell (SKR)** button.

If both calls are answered from the same handset, to switch between the two calls, press the **Line (SKR)** button while landline call is on hold, press the **Cell (SKR)** button while cellular call is on hold.

Available Options During a Landline Call

More

During an external landline call, press **More (SKL)** button to enter the More sub-menu there are two options available: **Hold** and **Intercom**.

Hold

From the **More** menu:

1. Use the  or  button to scroll to **Hold**.

2. Press the **Select (SKL)** button to confirm. The screen displays **LINE ON HOLD**, while the call is on hold, you can use the number keypad to make a new call out on the cell line. Press the Line or the Cell (SKR) to switch between the calls.

- To cancel hold, press the **UnHold (SKL)** button and return to original call.

Intercom

From the **More** menu:

- This feature allows you to create a 3-way conversation, please refer to Intercom Operation section of this manual for detail.



Available Options During a Cell Call

More

During an external cell call, press the **More (SKL)** button to enter the **More** sub-menu, there are three options available: **Hold**, **Intercom** and **Transfer to cell**.

Hold

From the **More** menu:

1. Use the  or  button to scroll to **Hold**.
2. Press **Select (SKL)** button to confirm, the screen displays **CELL ON HOLD**. While the call is on hold, you can use the number keypad to make a new landline cell .
 - To cancel hold, press the **UnHold (SKL)** button and return to original call.

Intercom

From the **More** menu:

- This feature allows you to create a 3-way conversation, please refer to Intercom operation section of this manual for detail.

Transfer to Cell

From the **More** menu:

This feature allows you cancel Bluetooth capabilities and transfer the active cell call from the handset back to your cell phone. The handset in use will then return to stand-by mode.

NOTE: Check your cell phone instruction manual regarding capabilities before attempting transfer.

Making a landline call when Talking To Cell Call

- During a cellular call, press the **line (SKR)** button to put the cellular call on hold, use the number keypad to make a land line call.

Making a Cell Call When Talking To Landline Call



- During a landline call, press the **Cell (SKR)** button to put the land line call on hold. Enter the desired phone number, Press the **Cell(SKR)** button to dial.

Conference

This feature allows you to create a 3-way conference calls with a single outside landline or cellular call and either; or a 4-way conference calls with the landline and cellular call simultaneously.

3-way conference calls with a single outside landline or cellular call and either

With a single outside landline or cellular call

1. During a landline or cellular call, press the **TALK** or **SPKR** button to answer the incoming call.
2. Press the **More (SKL)** button to enter sub-menu, Use the  or  button to select **Intercom** and press the **Select (SKL)** button to make the intercom call,
3. Press the **Conf (SKL)** button for 3-way conference. The screen displays **Conference**.
4. Press the **END/cancel** button to exit conference.

With an outside landline and cellular call

1. During a landline or cellular call, press the **Line/Cell (SKR)** button to make the other landline or cellular call,
2. Press the **Conf (SKL)** button to setup 3-way conference.
3. Press the **END/cancel** button to terminate both calls.

4-way conference calls with an outside landline and cellular call simultaneously

1. During the outside landline and cellular 3-way conference call, press the **TALK** button on another standby handset to join the 3-way cellular call
2. Press the **END/cancel** button to terminate both calls

Call Timer

After you press **TALK** or **SPKR** button on the handset, the screen displays the built-in call timer and begins counting the length of time of the call. The time will display for 3 seconds after the call has ended.

Auto Stand-by

Placing the cordless handset in the charge cradle while the handset is **Off** the hook (or during a call) automatically hangs up the handset.

Flash/Call Waiting

If you subscribe to the combined Call Waiting Caller ID service from your local telephone company, you will receive Caller ID information (if available) on Call Waiting calls. During a phone call, you will hear a beep to indicate another call is waiting on the line and Caller ID information for the waiting call shows on the handset display.


- To connect to the waiting call, press the **DELETE/flash** button on the handset, and your original call is put on hold.
- To switch between the two calls, press the **DELETE/flash** button.

NOTE: Some cellular phones do not support this feature, refer to your cellular devices instruction Manual.

Last Number Redial




You may redial a number up to 32 digits long.

To quickly redial the last number you dialed:


1. Press the **TALK** or **SPKR** button on the handset or press the **Cell (SKR)** button to dial the number.
2. Press the  button, the number dials automatically.

-OR-

To quickly choose from any of the last three numbers you dialed:

1. Press the  button first, then use the  or  button to select the desired redial number.
2. Press the **TALK** or **SPKR** button on the handset, the number dials automatically.

-OR-

If you get a busy signal and want to keep dialing the number, press the  button to quickly redial the number.

Page

The page feature helps you locate a misplaced handset. To send and receive pages, all handsets must be registered. If your handset is not registered, follow the instructions in the Registration section of this manual.

Paging from the Base/Group Page

Use the base-only to page all registered handsets at the same time.

1. Make sure the phone is **OFF** (not in talk mode).
2. Press the **Page** button on the base.
3. All registered handsets beep for two minutes and the screen displays **PAGING**.
4. To cancel the page, press the **Page** button on the base, or press any button on each handset.



Mute

To have a private, off-line conversation, use the mute feature. The party on the other end of the line cannot hear you, but you can still hear them.

When you are using the phone, press the **MUTE** button on handset to activate the mute function. The screen displays **Mute On**. To de-activate, press the **MUTE** button on handset again.

Ringer Volume (Short-cut)

There are two ways to set the ringer volume. One is via the handset menu as described in the section Programming the Telephone-->Sound Setting-->Ringer Volume, while the other one is this short-cut.


1. Make sure the phone is **OFF** (not in talk mode).
2. Press and hold the **#PAUSE/ringer** button until the screen displays the **Ring Volume** menu.
3. Use the  or  button to scroll to the desired ringer volume. The default is **Volume 5**.
4. Press the **Select (SKL)** button to save your selection. You will hear a confirmation tone.

Caller ID (CID)

IMPORTANT: In order to use this unit's Caller ID features, you must subscribe to either the standard Name/Number Caller ID Service or Call Waiting Caller ID Service. To know who is calling while you are on the phone, you must subscribe to Call Waiting Caller ID Service.

This unit receives and displays information transmitted by your local phone company. This information can include the phone number, date, and time; or the name, phone number, date, and time.

NOTE: Unit will not display time and date setting from incoming cellular calls.

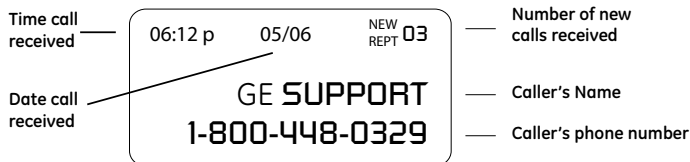

Call Waiting Caller ID

Provided you subscribe to Call Waiting Caller ID service from your phone company; if you receive an incoming call and you are using the GE multi handset system, a beep indicates the presence of a Call Waiting call on the line. The Call Waiting Caller ID information will be displayed and stored in the history of all handsets in the system.

- When you hear the call waiting beep in the handset receiver, press the **DELETE/flash** button to put the current call on hold and answer the incoming call. Press the **DELETE/flash** button again to return to the original call.

CID Error Codes

Various Caller ID error messages may appear on the display. Refer to the Display Messages section of this User's Guide for more information.

Receiving CID Records

When you receive a call, the Caller ID information is transmitted between the first and second ring. The Caller ID information appears on the display while the phone rings, giving you a chance to monitor the information and decide whether or not to answer the call.




Storing CID Records (In CID Memory)

If you are not at home or cannot answer, your telephone's Caller ID memory stores the data for the 40 most recent calls you received so you can see who called while you were unavailable. When the 41st call is received, the oldest Caller ID record (1st call) is automatically deleted.




You may review the stored information at any time. Calls received since your last review show on the top line of the display as; **All=XX, New=XX**.

Reviewing CID Records

As calls are received and stored, the display is updated to let you know how many calls have been received. To scroll CID records:

1. Make sure the phone is **OFF** (not in talk mode).
2. Press the  button. (a total of **All** calls and **New** calls displays.)
3. Press the **View (SKL)** button.
4. Press the  button to review the newest CID record.
5. Press the  button to review the oldest CID record first.





Dialing a CID Number

1. Make sure the phone is **OFF** (not in TALK mode).
2. Press the  button.
3. Press the **View (SKL)** button.
4. Use the  or  button to display the desired record.
5. Press the **TALK** or **SPKR** button. The number dials automatically.

Formatting a CID Number Before Dialing

NOTE: Depending on (a) how the incoming caller's phone number is formatted when it is received, and (b) whether or not you previously preprogrammed your local area code into the PHONE SETTING menu, you may need to adjust the format of the incoming caller's stored phone number before calling back the record.

If the number does not dial as shown, follow steps below to format it:

1. Make sure the phone is **OFF** (not in talk mode).
2. Press the  button.
3. Press the **View (SKL)** button or press the  button again.
4. Use the  or  button to scroll to the desired CID record.
5. Press the **More (SKL)** button.
6. Press the **Select (SKL)** button.
7. Press the **Format (SKL)** button to change the format of the displayed number.
8. Press the **TALK** or **SPKR** button. The formatted number dials automatically.

NOTE: TO dial from cellular line, press **Back (SKR)**, then press the **Cell (SKR)** button.







Available formats include:

<i>Number of digits</i>	<i>Explanation</i>	<i>Example</i>
Eleven digits	long distance code "1 " +3-digit area code +7-digit telephone number.	1-317-888-8888
Ten digits	3-digit area code + 7-digit telephone number.	317-888-8888
Seven digits	7-digit telephone number.	888-8888

Storing CID Records into Phone Book




You may also store CID information in the Phone Book.

NOTE: It is important that you format CID records correctly for dialing out BEFORE storing in the Phone Book as you cannot reformat CID records stored in memory.

1. Make sure the phone is **OFF** (not in talk mode).
2. Press the  button.
3. Press the **View (SKL)** button or press the  button again.
4. Use the  or  button to scroll to the desired CID record.
5. Press the **More (SKL)** button.
6. Use the  or  button to scroll to Store.
7. Press the **Select (SKL)** button.
8. The screen displays the CID numbers. Refer to “Adding Phone Book Entries” section to save the record.

NOTE: If the selected CID record contains any information that is non-numeric, the unit will not allow this record to transfer to the phone book.

Deleting a CID Record

1. Make sure the phone is **OFF** (not in TALK mode).
2. Press the  button.
3. Press the **View (SKL)** button.
4. Use the  or  button to scroll to the CID record.
5. Press the **DELETE/flash** button to show **DELETE?**

NOTE: To delete all CID records, press and hold the DELETE/flash button.

6. Press the **Yes (SKL)** button to confirm the deletion. The screens displays **DELETED**.

NOTE: Press the No (SKR) button to return to the stand-by mode or if no action is taken, it will exit automatically after one minute.

Connecting the Belt Clip

1. To attach the belt clip, insert the sides of the belt clip into the slots on each side of the handset.
2. Snap the ends of the belt clip into place.

Connecting Optional Headset

Each handset can be used with an optional headset for hands free operation.

1. Connect the headset to the headset jack on the side of the handset. The handset receiver and microphone are disabled when the headset is connected.
2. Adjust the headset to rest comfortably on top of your head and over your ear. Move the microphone to approximately two to three inches from your mouth.
3. Press the **TALK** button to answer a call or make calls using the headset.
4. To return to normal operation, unplug the headset from the jack.

Changing the Battery



CAUTION: To reduce the risk of fire or personal injury, use only the Thomson Inc. approved model 5-2840 Nickel-metal Hydride battery (Ni-MH), which is compatible with this unit.

1. Make sure the telephone is **OFF** (not in TALK mode) before you replace the battery.
2. Remove the battery compartment door.
3. Disconnect the cord attached to the battery pack and remove the battery pack from the handset.
4. Insert the new battery pack and connect the cord to the jack inside the battery compartment.
5. Put the battery compartment door back on.
6. Place handset in the charge cradle to charge. **Allow the handset battery to properly charge (for 16 hours) prior to first use or when you install a new battery pack. If you do not properly charge the phone, battery performance will be compromised.**

Battery Safety Precautions

- Do not burn, disassemble, mutilate, or puncture. Like other batteries of this type, toxic materials could be released which can cause injury.
- To reduce the risk of fire or personal injury, use only the **Nickel-metal Hydride** battery listed in the User's Guide.
- Keep batteries out of the reach of children.
- Remove batteries if storing over 30 days.

NOTE: The RBRC seal on the battery used in your Thomson Inc. product indicates that we are participating in a program to collect and recycle the rechargeable battery (or batteries).
For more information go to the RBRC web site at www.rbrc.org or call 1-800-8-BATTERY or contact a local recycling center.

Display Messages

The following indicators show the status of a message or of the unit.

BLOCKED NUMBER	The person is calling from a number that has been blocked from transmission.
CHARGING...	Indicates the handset need to charge for a period of time before it can resume normal function.
DELETE ALL?	Prompt asking if you want to erase all Caller ID records.
DELETE CALL ID?	Prompt asking if you want to erase the Caller ID record that is shown on the display.
DELETE?	Prompt asking if you want to erase one of the 200 records stored in the phone's memory.
END OF LIST	Indicates that there is no additional information in Caller ID memory.
ENTER NAME	Prompt telling you to enter the name in one of the 200 memory locations.

ENTER NUMBER	Prompt telling you to enter a telephone number in one of the 200 memory locations.
HANDSET NAME	Prompt telling you to enter the user name for the registered handset.
HANDSET NEEDS REGISTRATION	Indicates you must register a non-registered handset prior to use.
INCOMPLETE DATA	Caller information is interrupted during transmission or the phone line is excessively noisy.
INTERCOM FROM	intercom call from other handset.
LINE IN USE	Displays on handset while the line is in use.
LONG DISTANCE	Indicates CID record is from a long distance call.
LOW BATTERY	Indicates the battery needs to be charged.
NEW	Indicates call or calls have not been reviewed.
NEW CALL XX	XX represents the number of new CID records not reviewed.
NO CALLS	Indicates there are no CID records in memory.
NO DATA	No Caller ID information was received.
OUT OF RANGE	May indicate handset is too far away from the base or that the power has been interrupted. Move closer and check connections.
PAGING or PLEASE REGISTER	Someone pressed the PAGE button on the base or Indicates the handset needs to be registered before use.
REPEAT	Repeat call message. Indicates that a new call from the same number was received more than once.
SEARCHING	Indicates handset is searching for the base.
SPEAKER	Indicates the handset is in speakerphone mode.
UNKNOWN CALLER/ NAME/NUMBER	The incoming call is from an area not serviced by Caller ID or the information was not sent.

Handset Sound Signals

<i>Signal</i>	<i>Meaning</i>
A long warbling tone (with ringer on)	Signals an incoming call
Three short beeps	Page signal
One long beep	Confirmation tone for the completion of a function
One short beep (during room monitoring mode)	Ring alert tone
One short beep (every 7 seconds)	Low battery warning

Troubleshooting Guide

Telephone Solutions

No dial tone

- Check and repeat installation steps:
Ensure the base power cord is connected to a working electrical outlet .
Ensure the telephone line cord is connected to the base and the wall jack.
 - Connect another phone to the same jack; if there is still no dial tone, the problem might be your wiring or local service.
 - The handset may be out of range of the base. Move closer to the base.
 - Ensure the battery is properly charged (16 hours).
 - Ensure the battery pack is installed correctly.
 - The handset should beep when you press the **TALK** button and the charge indicator should be lit when the handset rests in the cradle. If not, the battery may need to be charged.
 - Place handset in charge cradle for at least 20 seconds to reset the unit.
-

Handset does not ring

- Make sure the handset ringer switch is set to ON, this can be done through the handset setup menu - Ringer Volume.
 - The handset may be out of range. Move closer to the base.
 - You may have too many extension phones on your line. Try unplugging some phones.
 - Check for dial tone.
-

You experience static, noise, or fading in and out

- The handset may be out of range of the base. Move closer to the base.
 - Make sure base is not plugged into an outlet with another household appliance. If necessary, relocate the base.
 - Charge the battery.
-

Unit beeps

- Clean charging contacts on cordless handset.
 - See solutions for "No dial tone".
 - Replace the battery.
-

Memory Dialing doesn't work

- Did you program the memory location keys correctly?
 - Did you follow proper dialing sequence?
-

Unit locks up and there is no communication between the base and cordless handset

- Unplug the AC power adaptor from the wall outlet and the back of the base. Remove the handset battery. Wait for 30 seconds and plug the power adaptor back into the base and wall outlet. Reconnect the battery and charge for 16 hours.
-

Handset displays **SEARCHING** or **OUT OF RANGE** and cannot link up with the base when the **TALK** button is pressed.

- Handset may be out of range of the base. Move closer to the base.
 - Make sure the power adaptor is properly installed.
 - Disconnect the handset battery and plug it in again. Place the handset on the cradle for at least 2 to 3 minutes.
 - Disconnect the power adaptor and plug it in again. Then place the handset on the cradle for at least 2 to 3 minutes.
-

Handset displays **HANDSET NEEDS REGISTRATION**

- Follow the programming in the telephone procedures to re-register the handset to the base.
 - Press the **Select (SKL)** button to begin handset registration. Follow instructions on Handset screen.
-

Caller ID Solutions

No Display

- Charge the battery (for 16 hours). Or replace the battery.
 - Make sure that the unit is connected to a non-switched electrical outlet.
Disconnect the AC power adaptor from the base and reconnect it.
-

Caller ID Error Message

- The unit displays this message if it detects anything other than valid Caller ID information during the silent period after the first ring. This message indicates the presence of noise on the line.
-

No Caller ID

- In order to receive Caller ID information, you must subscribe to the standard name/number Caller ID service from your local telephone company.
-

Battery Solutions

If you experience any of the following problems, even after fully recharging the battery, you may need to replace the battery pack:

- Short talk time
- Poor sound quality
- Charge indicator on the cradle fails to illuminate.
- Limited range

Causes of Poor Reception

- Aluminum siding.
- Foil backing on insulation.
- Heating ducts and other metal construction that can shield radio signals.
- You're too close to appliances such as microwaves, stoves, computers, etc.
- Atmospheric conditions, such as strong storms.
- Base is installed in the basement or lower floor of the house.
- Base is plugged into AC outlet with other electronic devices.
- Baby monitor is using the same frequency.
- Handset battery is low.

General Product Care

To keep your unit working and looking good, follow these guidelines:

- Avoid dropping the handset, as well as other rough treatment to the phone.
- Clean the phone with a soft cloth.
- Never use a strong cleaning agent or abrasive powder because this will damage the finish.
- Retain the original packaging in case you need to ship the phone at a later date.
- Periodically clean the charge contacts on the handset and remote charger with a clean pencil eraser.

Warranty

Thomson Multimedia Ltd., warrants to the purchaser or gift recipient that if any manufacturing defect becomes apparent in this product within 1 year from the original date of purchase, it will be replaced free of charge, including return transportation.

This warranty does not include damage to the product resulting from accidents, misuse or leaking batteries.

Should your product not perform properly during the warranty period, either:

1. Return it to the selling dealer with proof of purchase for replacement,
OR
2. Call 1-800-522-0338 (English) or 1-800-522-0445 (French) for instructions concerning where to mail the product.

The provisions of this written warranty are in addition to and not a modification of or subtraction from the statutory warranties and other rights and remedies contained in any applicable legislation, and to the extent that any such provisions purport to disclaim, exclude or limit any such statutory warranties and other rights and remedies, such provisions shall be deemed to be amended to the extent necessary to comply therewith.

Attach your sales receipt to this booklet for future reference. This information is required if service is needed during the warranty period.

PURCHASE DATE _____

NAME OF STORE _____

Accessory Information

DESCRIPTION	MODEL NO.
AC power adapter	5-2812
Belt Clip	5-2717
Headset	5-2425 (black)
Replacement Handset Battery	5-2840

To order, call the nearest distributor for your area;

Ontario: (905) 624-8516

Manitoba: (204) 783-2088

British Columbia: (604) 438-8001

Quebec: (514) 352-9071

A shipping and handling fee will be charged upon ordering.

It is required by law to collect appropriate sales tax for each individual state, country, and locality to which the merchandise is being sent. Items are subject to availability.

Index

3-way conference calls with...	38	Deleting a Phone Book Record	17
4-way conference calls with...	38	Deleting a Reminder Record	25
A		Deleting the Phone Book Entries In Desired Group	18
Accessory Information	53	Deleting the Speed Dialing Number	19
Adding a Reminder	23	Device Info	33
Adding Phone Book Entries	14	Dialed Calls	21
Adding the Phone Book Entries In Desired Group	18	Dialing a CID Number	42
Adding the Speed Dialing Number	19	Digital Security System	9
Alarm	21	Disconnect	13
Answering a Call	35	Display Messages	46
Auto Connect	33	E	
Auto Standby	39	Editing a Phone Book Record	17
Available Options During a Cell Call	37	Editing the Speed Dialing Number	19
Available Options During a Landline Call	36	Equalizer	31
		Extra Features	25
B		F	
Base Layout	11	FCC RF Radiation Exposure Statement	3
Base Station	12	Flash/Call Waiting	39
Battery Safety Precautions	46	Formatting a CID Number Before Dialing	43
Battery Solutions	50	G	
Before You Begin	7	General Product Care	51
Bluetooth®	33	Global De-Registration	30
BlueTooth® Setup	13	H	
C		Handset Layout	10
Call Records	20	Handset Name	29
Call Timer	39	Handset Sound Signals	48
Call Waiting Caller ID	41	Handset to Handset Intercom Call	26
Caller ID (CID)	41	Hearing Aid Compatibility (HAC)	3
Caller ID Solutions	50	Hold	36,37
Causes of Poor Reception	51	I	
Cellular Calls	35	Important Information	2
Changing the Battery	45	Important Installation Guidelines	9
Changing the Group Name	18	IN USE Indicator on the Base	34
CID Error Codes	41	Information for DECT Product	3
Conference	38	Inserting a Pause in the Dialing Sequence	16
Connect	13	Installation	9
Connecting Optional Headset	45	Installing the Handset Battery	11
Connecting the Belt Clip	45	Installing the Phone	11
D		Intercom	37
Default Setting	31	Intercom Operation	26
Deleting a CID Record	44		

Index

Interference Information	2	Reviewing CID Records	42
Introduction	7	Reviewing Phone Book Records	16
K		Ringer Tone	32
Key Tone	32	Ringer Volume	32
		Ringer Volume (Shortcut)	40
		Room Monitoring	25
L		S	
Landline Calls	34,35	Scheduler	23
Language	28	Set Alarm Melody	22,24
Last Number Redial	39	Set Alarm Time	21
Licensing	3	Set Area Code	28
M		Set Cycle Time	22,24
Making a Call	34	Set Date/Time	28
Managing Speed Dialing Record	19	Set Group Ring	18
Managing the Record Grouping in Phone Book	18	Set Snooze	23
More	36,37	Snooze	22
Mute	40	Sound Setting	31
P		Speakerphone Operation	34
Page	40	Storing CID Records (In CID Memory)	42
Paging from the Base/Group Page	40	Storing CID Records into Phone Book	44
Parts Checklist	7	Storing the Last Number Dialed	16
Phone Book	14	T	
Phone Setting	27	Table of Contents	5
Programming Information	14	TALK Indicator and SPKR Indicator on the Handset	34
Programming The Handset	14	Telephone Jack Requirements	8
Push to Talk	27	Telephone Network Information	2
R		Telephone Operation	34
Received Calls	20	Telephone Solutions	48
Receiving a Cellular Call during a Landline Call	36	Tone/Pulse	29
Receiving a Landline Call during a Cellular Call	36	Transfer to Cell	37
Receiving an Intercom Call	27	Transferring the Phone book record between handset(s)	20
Receiving CID Records	42	Troubleshooting Guide	48
Receiving Land line Call And Cell Call Simultaneously	36	V	
Reconnect	13	Visual Indicators	34
Registration	29	VMWI Indicator on Handset	34
REN Numer	3	Volume Settings	34
Reviewing and Editing the Reminder Record	24	W	
		Warranty	52

Visit the GE website at: www.GE.com/phones



Model 28127
00026164 (Rev. 0 CAN E)
08-18
Printed in China

Thomson Multimedia Ltd.
30 Eglinton Ave W., Suite 304
Mississauga, ON Canada L5R 3E7
© 2008 Thomson Multimedia Ltd.
Trademark(s) ® Registered
Marque(s) ® déposée(s)